



6th ELEMENT /W**EN** INSTALLATION INSTRUCTIONS**FR** NOTICE DE MONTAGE**DE** MONTAGEANLEITUNG**PT** INSTRUÇÕES DE MONTAGEM**ES** INSTRUCCIONES DE MONTAJE**IIV382**


EN READ THE SUPPLEMENTARY MANUALS.
FR LIRE LES NOTICES DE MONTAGE SUPPLÉMENTAIRES.
DE LESEN SIE DIE ZUSÄTZLICHEN MONTAGEANLEITUNGEN
PT CONSULTE OS MANUAIS COMPLEMENTARES.
ES LEA LOS MANUALES COMPLEMENTARIOS.

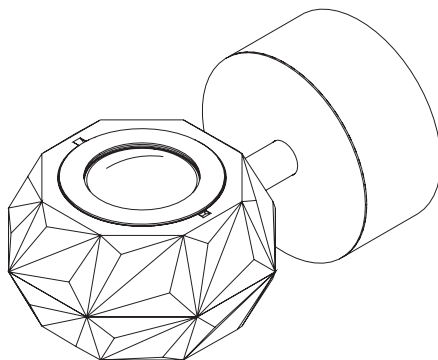

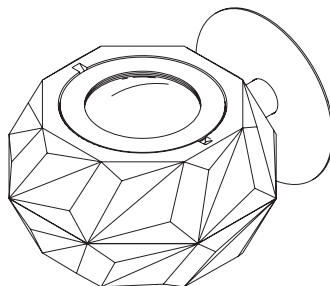

**IIV815**

Order code / Code com. / Bestell-Nr. / Código / Código: 90279L...| 90330L...

**IP 40****650°C****EN** Carefully read the installation instructions provided before installing the device. Safety and Maintenance: Scan here.**FR** Lire attentivement les notices de montage avant l'installation de l'appareil. Sécurité et Entretien: Scannez ici.**DE** Bitte lesen die mitgelieferte Montageanleitung vor der Montage des Geräts. Sicherheit und Wartung: Hier scannen.**PT** Leia atentamente as instruções de montagem fornecidas antes de instalar o aparelho. Segurança e Manutenção: Scan aqui.**ES** Lea atentamente las instrucciones de montaje proporcionadas antes de instalar el aparato. Seguridad y Mantenimiento: Escanea aquí.

6th ELEMENT /W



W	mA	V	 (mm)	 (mm)	 (mm)	 (mm)
9	250	34,4	Ø140x80x160	200x200	135x135	10-25
12	350	35,4	Ø140x80x160	200x200	135x135	10-25
17	500	34,4	Ø140x80x160	200x200	135x135	10-25

TOOLS | OUTILS | WERKZEUG | FERRAMENTAS | HERRAMIENTAS

Umbrako 2,5mm
Phillips screwdriver




EN USE GLOVES.
FR UTILISEZ DES GANTS.
DE HANDSCHUHE BENUTZEN.
PT UTILIZE LUVAS.
ES USE GUANTES.



6th ELEMENT /W

90279L... | 90330L...

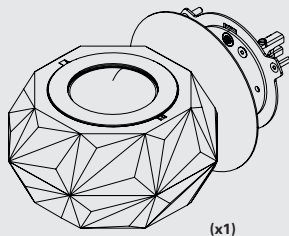

(x1)




(x3)

CEILING ROSE PATÈRE DE SUSPENSION DECKENDOSE CAIXA DE ALIMENTAÇÃO BASE DE TETO

97201... | 97202...

RECESSED T52 Q200
ENCASTRÉE T52 Q200
EINBAU T52 Q200
ENCASTRAR T52 Q200
EMPOTRAR T52 Q200

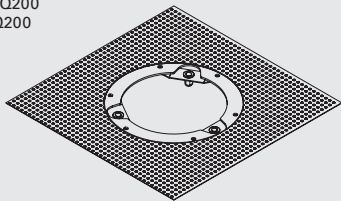


(x1)

97203... | 97204...

SURFACE MOUNTED T51 D120
SAILLIET T51 D120
ANBAU T51 D120
SALIENTE T51 D120
SUPERFICIE T51 D120



(x3/x5/x7)

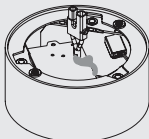

(x1)

+ 
IIV815

6th ELEMENT /W + T52



EN RECESSED

FR ENCASTRE


DE EINBAU

PT ENCASTRAR

ES EMPOTRAR

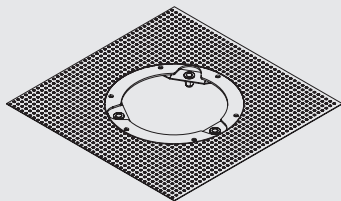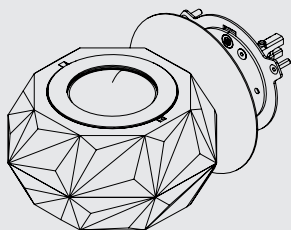

1

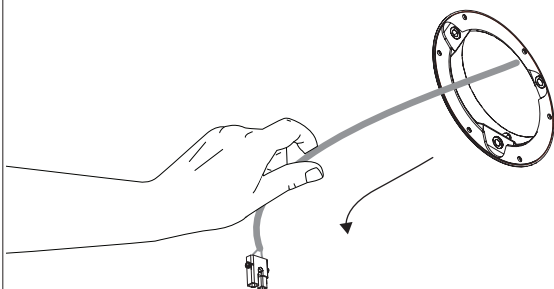


TO ASSEMBLE THE CEILING ROSE, READ:
POUR LE MONTAGE DE LA PÂTERES DE
SUSPENSION LIRE :
ZUR MONTAGE DER DECKENROSE LESEN:
PARA A MONTAGEM DA CAIXA DE ALIMEN-
TAÇÃO LER:
PARA LA MONTAJE DE LA BASE DE TECHO,
LEER:




IIV815

1.1


1.

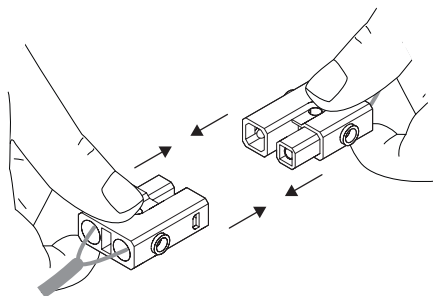

2.

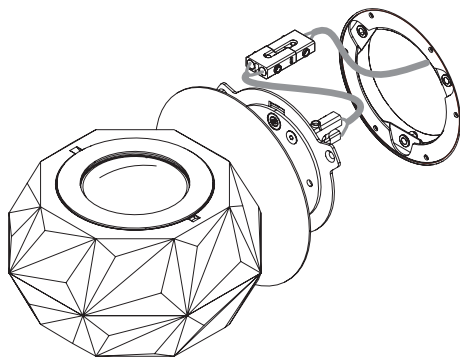


1.2

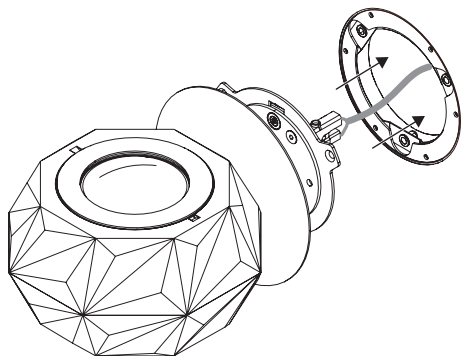


1.3

1.

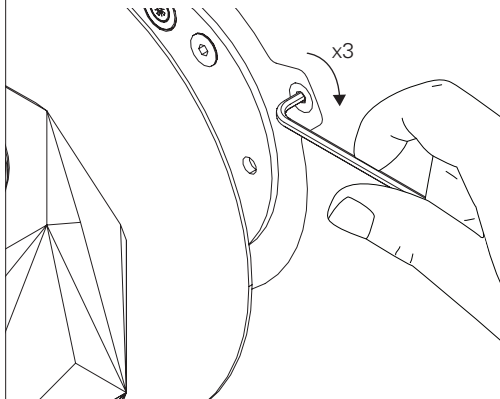


2.

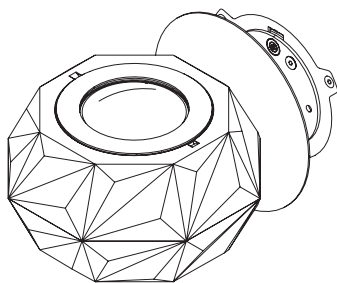


1.4

1.

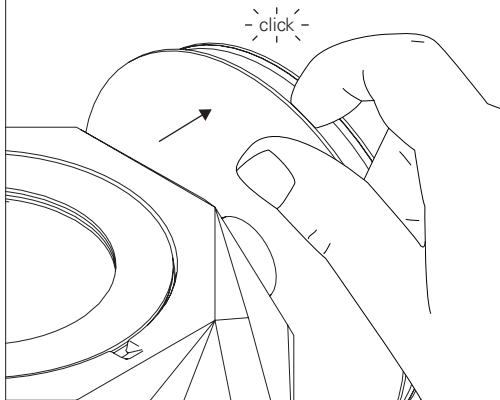

2.

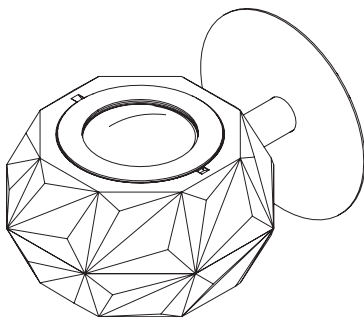

6th ELEMENT /W + T51



EN SURFACE MOUNTED

FR SAILLIE


DE ANBAU

PT SALIENTE

ES SUPERFICIE

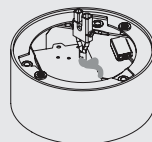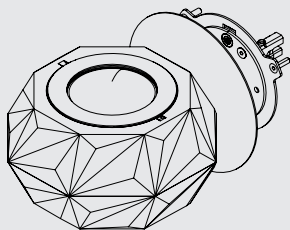

2

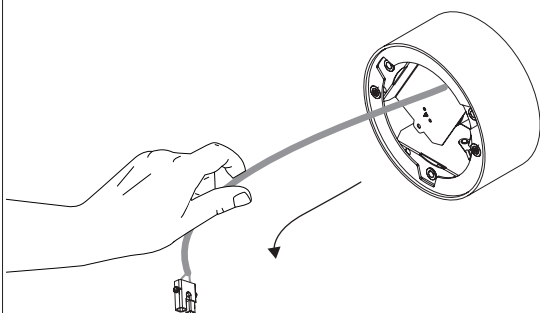


TO ASSEMBLE THE CEILING ROSE, READ:
POUR LE MONTAGE DE LA PÂTERES DE
SUSPENSION LIRE :
ZUR MONTAGE DER DECKENDOSE LESEN:
PARA A MONTAGEM DA CAIXA DE
ALIMENTAÇÃO LER:
PARA LA MONTAJE DE LA BASE DE TECHO,
LEER:




IIV815

2.1


1.

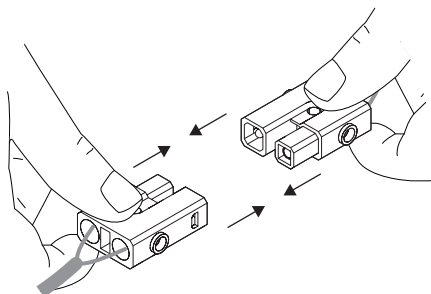

2.

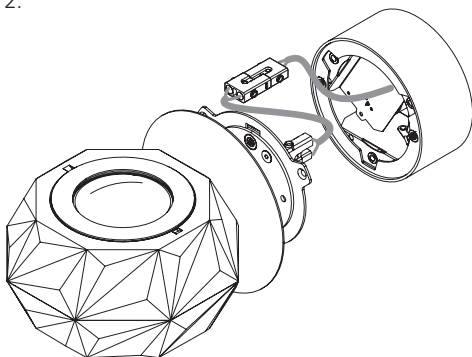


2.2

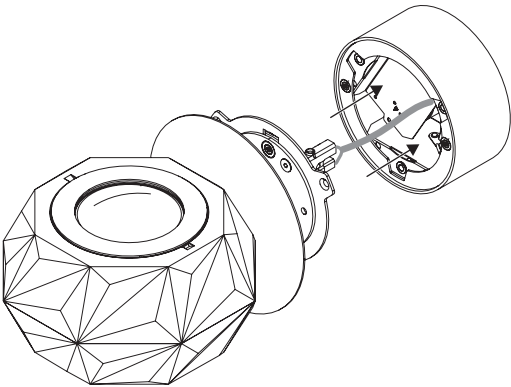


2.3

1.

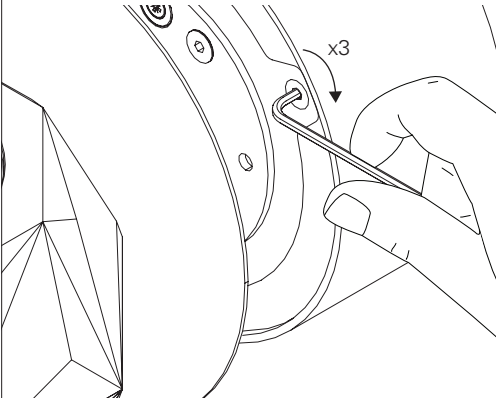


2.

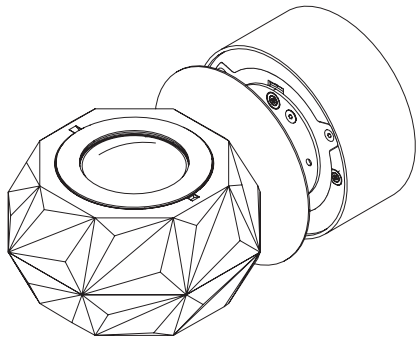

2.4

1.

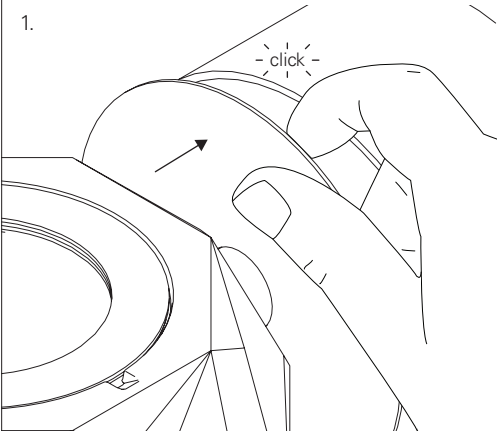

2.

