


REBA 50 /W Line**EN** INSTALLATION INSTRUCTIONS**FR** NOTICE DE MONTAGE**DE** MONTAGEANLEITUNG**PT** INSTRUÇÕES DE MONTAGEM**ES** INSTRUCCIONES DE MONTAJE


EN READ THE SUPPLEMENTARY MANUALS.
FR LIRE LES NOTICES DE MONTAGE SUPPLÉMENTAIRES.
DE LESEN SIE DIE ZUSÄTZLICHEN MONTAGEANLEITUNGEN
PT CONSULTE OS MANUAIS COMPLEMENTARES.
ES LEA LOS MANUALES COMPLEMENTARIOS.



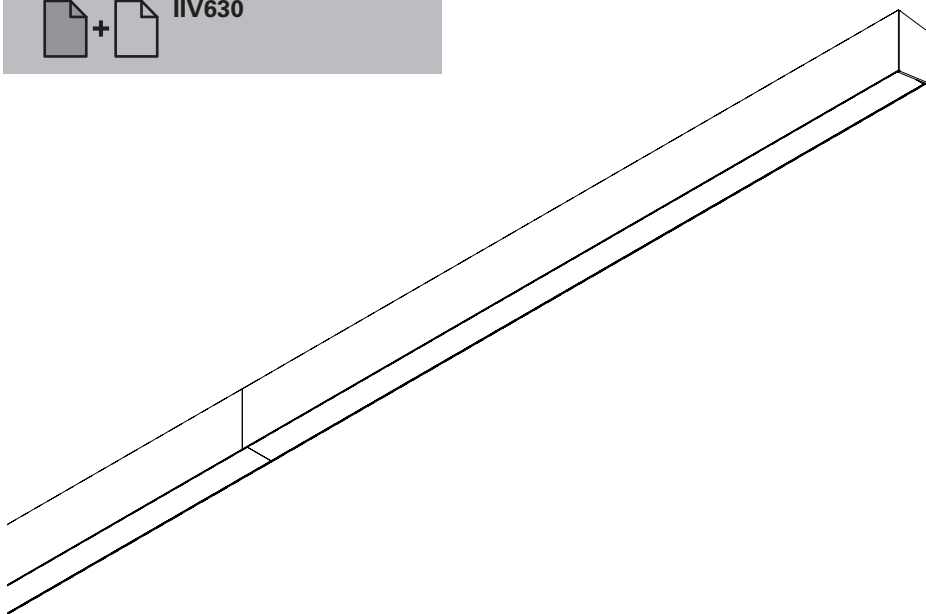


**IIV630**

Order code / Code com. / Bestell-Nr. / Código / Código: 90518... | 90526... | 90535... | 90536...

**EN** Carefully read the installation instructions provided before installing the device. Safety and Maintenance: Scan here. |**FR** Lire attentivement les notices de montage avant l'installation de l'appareil. Sécurité et Entretien: Sancez ici. |**DE** Bitte lesen die mitgelieferte Montageanleitung vor de Montage des Geräts. Sicherheit und Wartung: Hier scannen. |**PT** Leia atentamente as instruções de montagem fornecidas antes de instalar o aparelho. Segurança e Manutenção: Scan aqui. |**ES** Lea atentamente las instrucciones de montaje proporcionadas antes de instalar el aparato. Seguridad y Mantenimiento: Escanea aqui. |


REBA 50 /W Line



REBA 50 /W Line			
START/END	MID	HORIZONTAL CORNER (HRZ)	EDGE
 (mm)	 (mm)	 (mm)	 (mm)
1125x54x90	1122x54x90	602x54x90	601x54x90
1405x54x90	1402x54x90		
1685x54x90	1682x54x90	VERTICAL CORNER (VRT)	
1965x54x90	1962x54x90		
2245x54x90	2242x54x90	 (mm)	
2525x54x90	2522x54x90	631x54x90	
2805x54x90	2802x54x90		

TOOLS | OUTILS | WERKZEUG | FERRAMENTAS | HERRAMIENTAS

Phillips screwdriver




EN USE GLOVES.
FR UTILISEZ DES GANTS.
DE HANDSCHUHE BENUTZEN.
PT UTILIZE LUVAS.
ES USE GUANTES.

REBA 50 /W Line

90518... | 90526... | 90535... | 90536...




IIV662

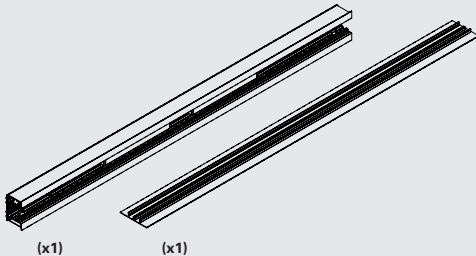


START KIT
KIT DÉBUT DE LIGNE
START KIT
START KIT
START KIT

923400...

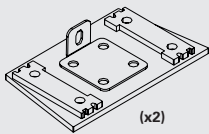

THROUGH-WIRING
CÂBLAGE TRAVERSANT
DURCHGANGSVERDRAHTUNG
CABLAGEM LINHA CONTÍNUA
CABLEADO PARA LÍNEA CONTINUA



9456... | 9457... | 9480... | 9481... | 9482...

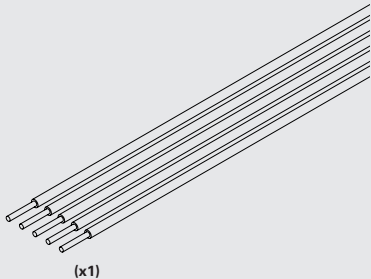

IIV630



BODY CONNECTOR KIT
KIT UNION
VERBINDUNGS KIT
KIT DE UNIÃO
KIT DE UNIÓN

932120

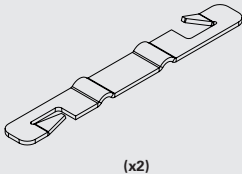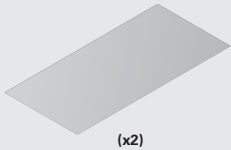


LINE (TOP VIEW)

REBA 50 W EXT Line				
L/L1	A	B	C	E
1122	60	1002	37,5	35
1402		1282		
1682		1562		
1962		1842		
2242		2122		
2522		2402		
2802		2682		

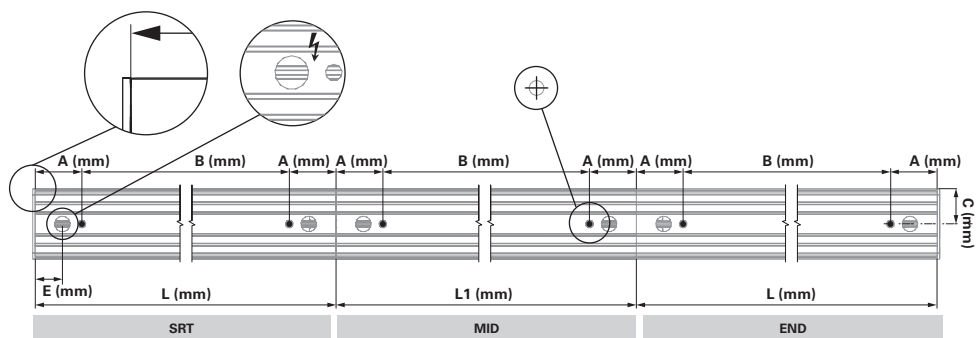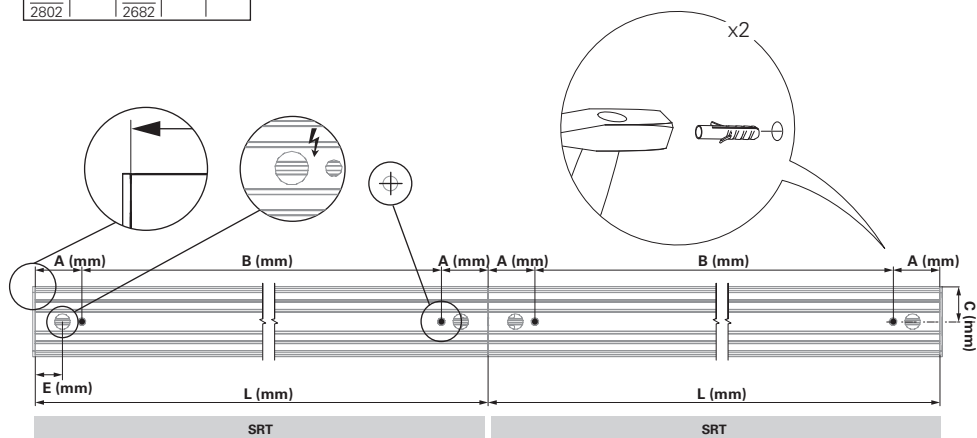


VERTICAL CORNER (SIDE VIEW)

REBA 50 W EXT Line				
L	A	B	C	E
631	60	467	37,5	35

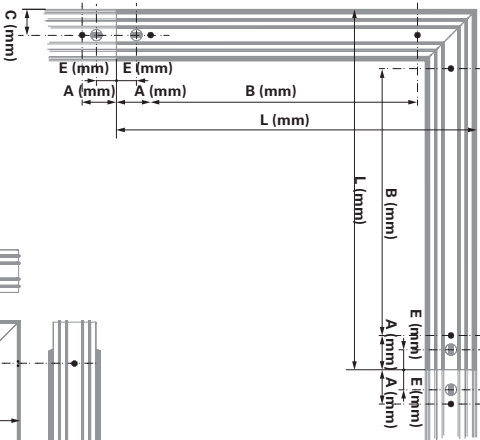


HORIZONTAL CORNER (TOP VIEW)

REBA 50 W EXT Line				
L	A	B	C	E
602	60	467	37,5	35

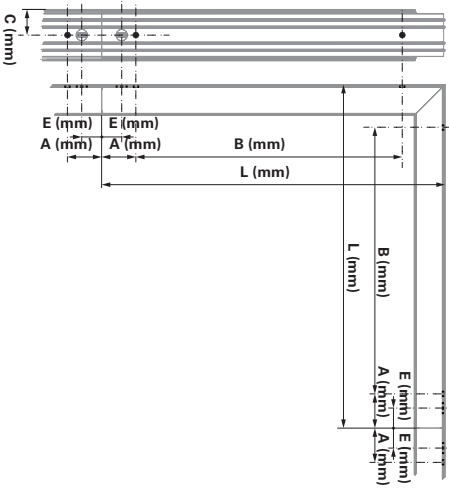


EDGE CORNER (TOP VIEW)

REBA 50 W EXT Line				
L	A	B	C	E
601	60	465	37,5	35

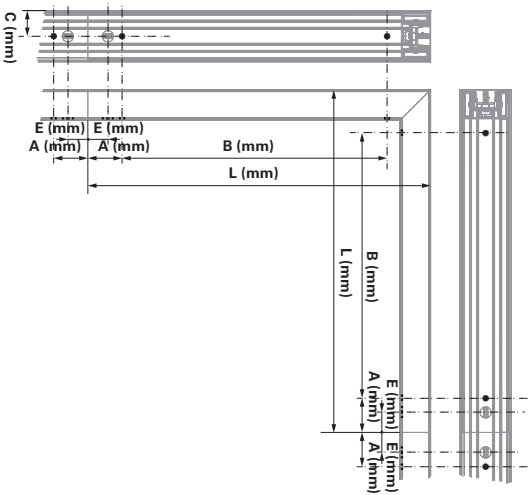


1

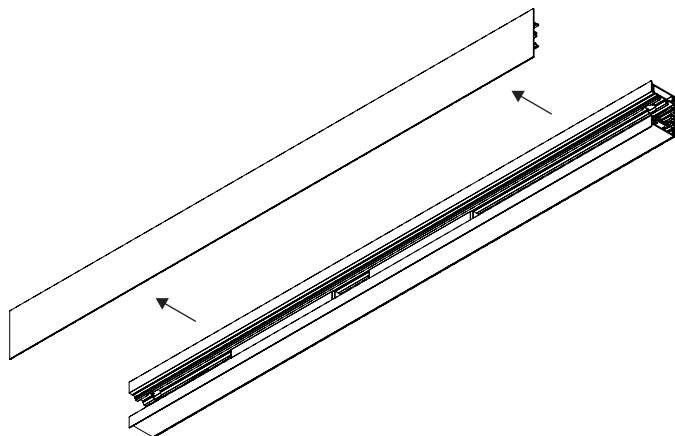


2


1.

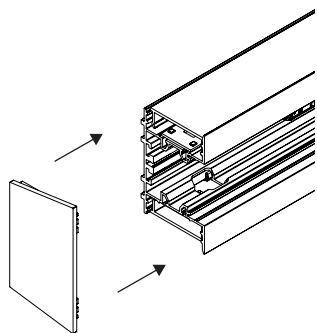


2.



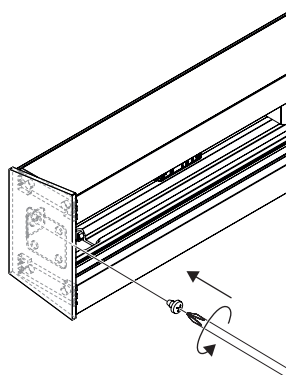


3.

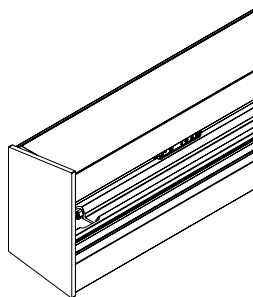


3

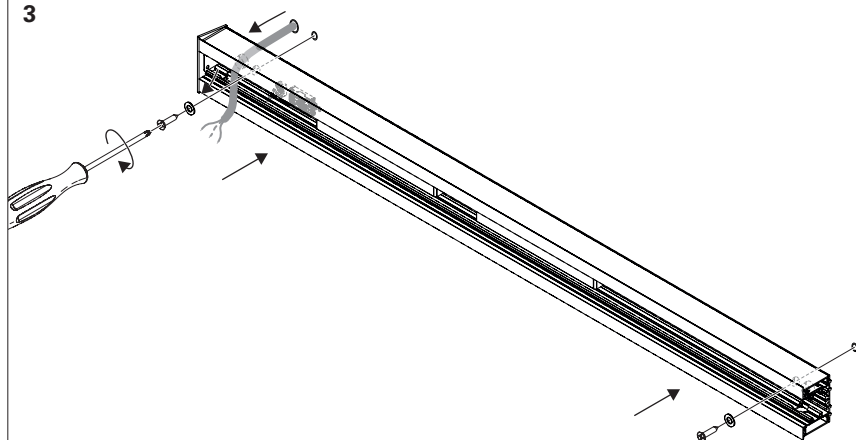


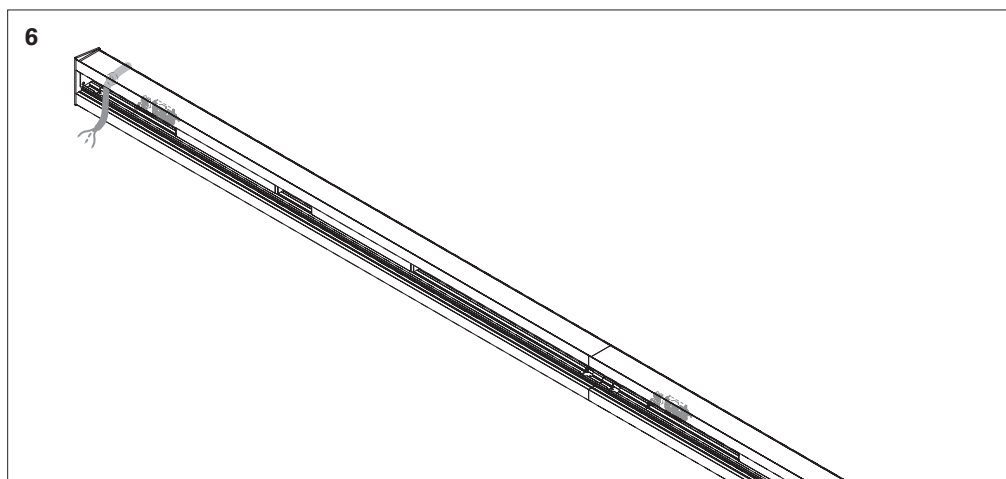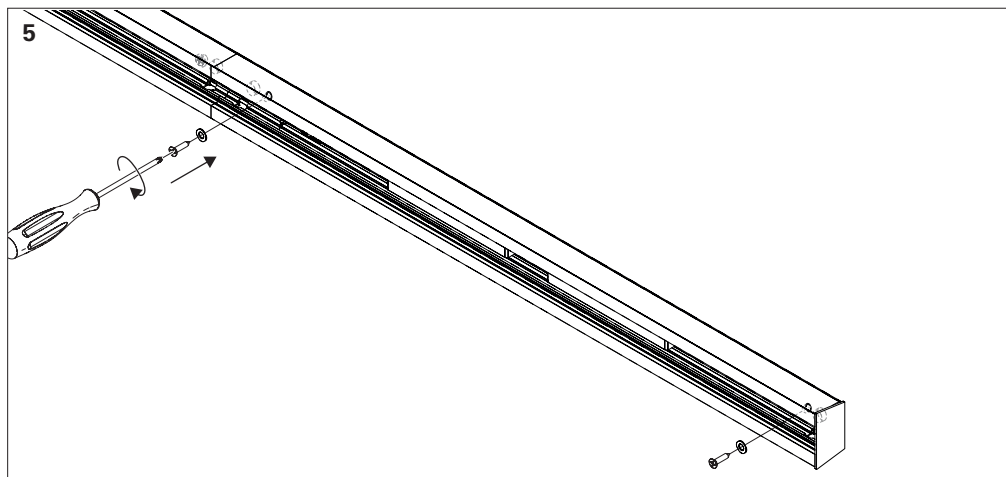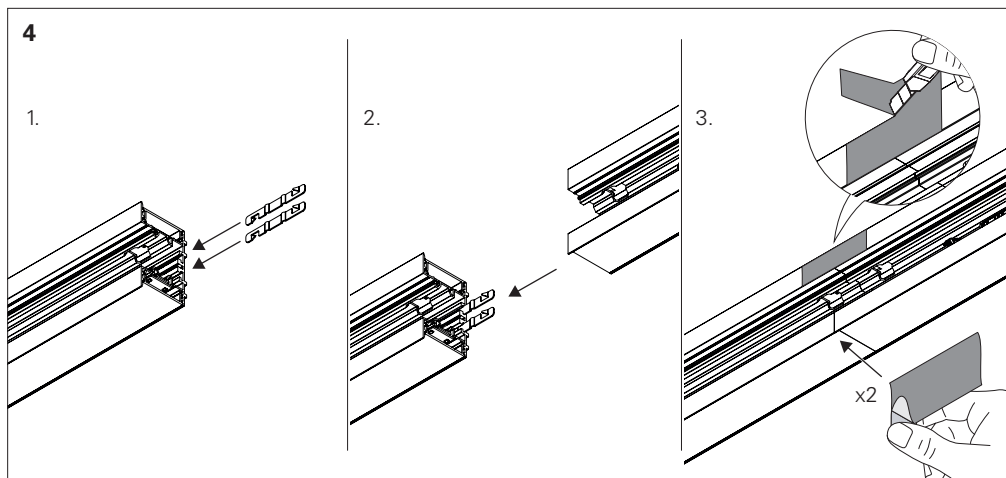


7 - SRT (Start)

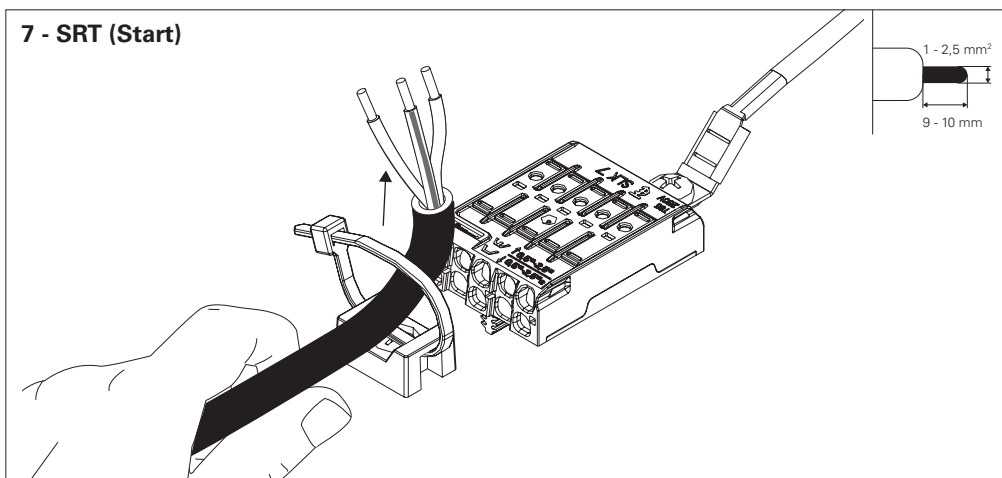


8 - HF

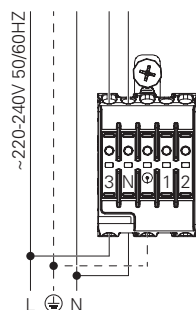


DALI / TW

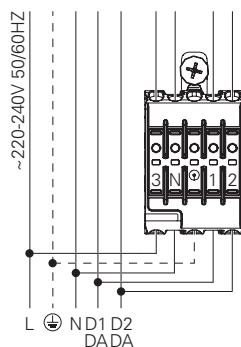


SWD

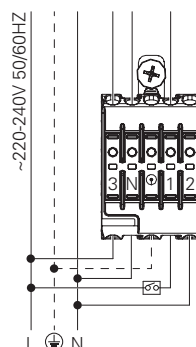


8 - HF + K3

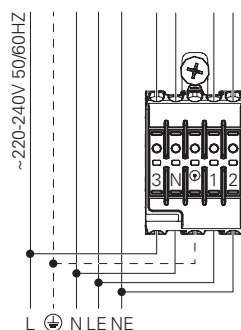


HF + K3 + TEL

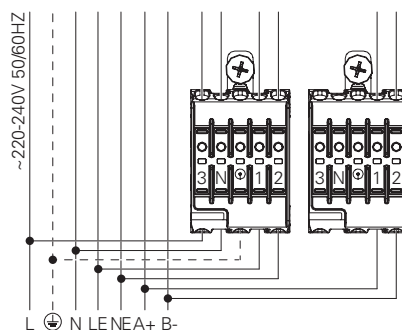


8 - DALI + K3

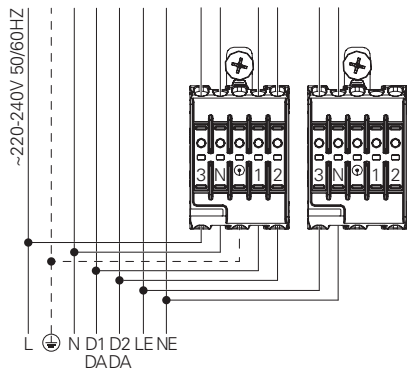


DALI + K3 + TEL

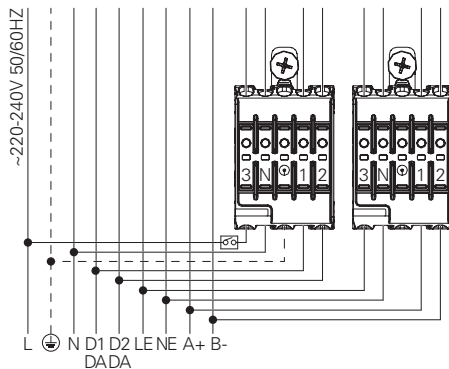

8 - SWD + K3

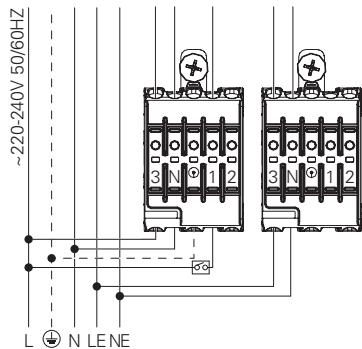

SWD + K3 + TEL

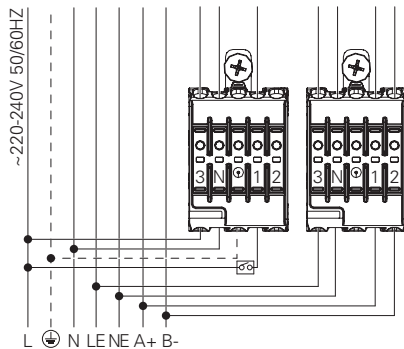


8.1 - HF + CD | HF + CD + K3 | HF + CD + K3 + TEL | SWD + CD | SWD + CD + K3 | SWD + CD + K3 + TEL




ONLY FOR REBA 50 /W Line (D/I) VERSION
 UNIQUEMENT POUR LA VERSION REBA 50 /W Line (D/I)
 NUR FÜR DIE REBA 50 /W Line (D/I)-VERSION
 SÓ PARA A VERSÃO REBA 50 /W Line (D/I)
 SOLO PARA LA VERSIÓN REBA 50 /W Line (D/I)


8.1 - HF + CD

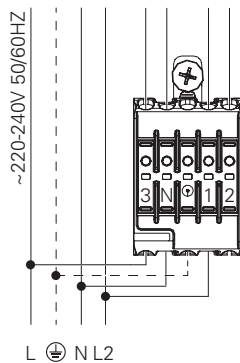


HF + CD + K3

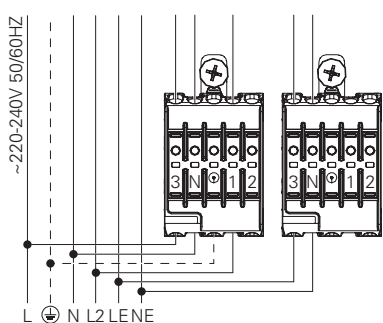


8.1 - HF + CD + K3 + TEL

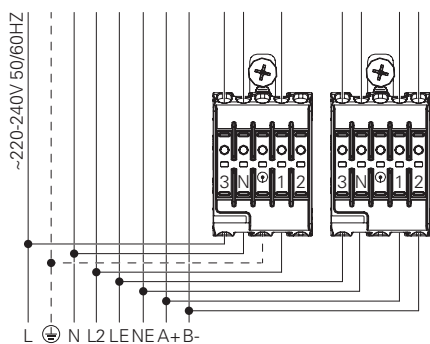


SWD + CD

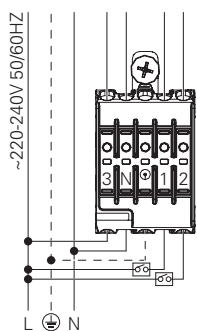


8.1 - SWD + CD + K3

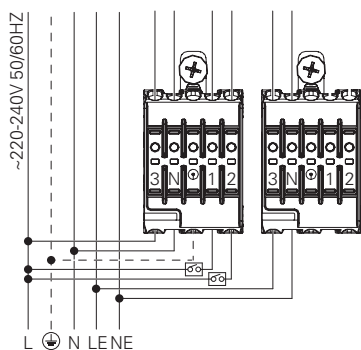

SWD + CD + K3 + TEL

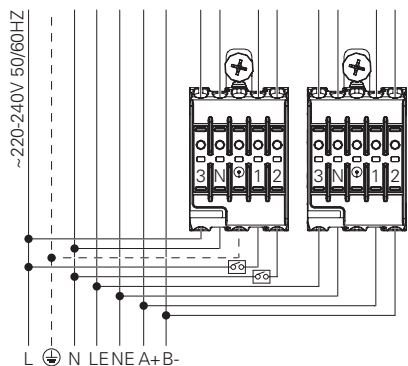

9

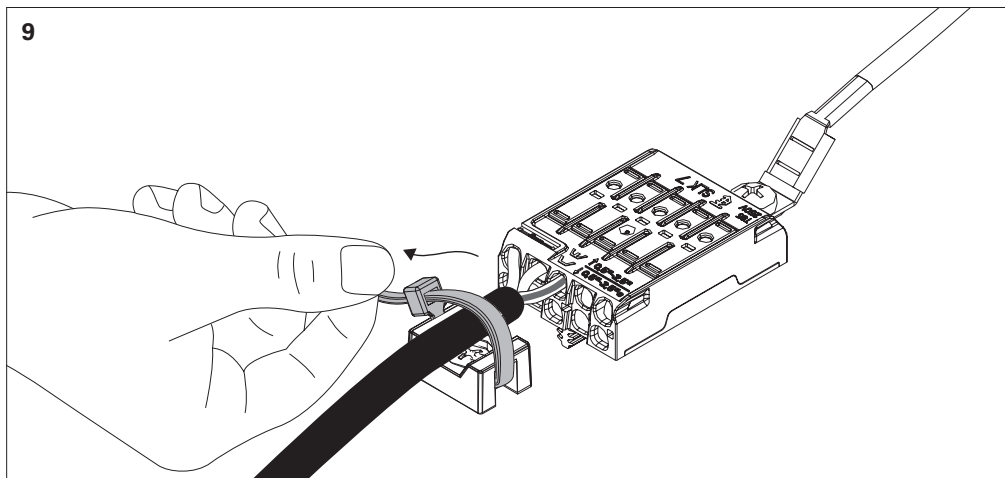

10



TO CONNECT THE THROUGH-WIRING SEE:
POUR BRANCHER LE CÂBLAGE
TRAVERSANT VOIR:
ZUM ANSCHLIESSEN DER VERDRAH-
TUNG LESEN SIE:
PARA LIGAR A CABLEADO LER:
PARA CONECTAR EL CABLEADO PARA
LINEA CONTINUA LEER:



IIV630

11

