

VEGA Sq

Recessed ceiling rose | Patère de suspension encastrée |
Deckendose zum einbau | Caixa de alimentação de encastrar |
Base de techo de empotrar


EN INSTALLATION INSTRUCTIONS

FR NOTICE DE MONTAGE

DE MONTAGEANLEITUNG

PT INSTRUÇÕES DE MONTAGEM

ES INSTRUCCIONES DE MONTAJE

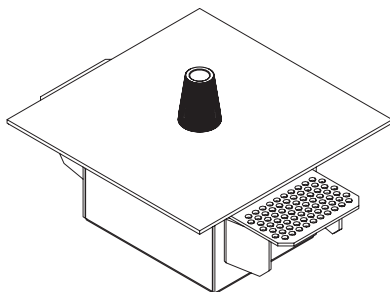

Order code / Code com. / Bestell-Nr. / Código / Código: 912720... | 912730...



EN Carefully read the instalation instructions provided before installing the device. Safety and Maintenance: Scan here.


FR Lire attentivement les notices de montage avant l'installation de l'appareil. Sécurité et Entretien: Sancez ici.

DE Bitte lesen die mitgelieferte Montageanleitungen vor de Montage des Geräts. Sicherheit und Wartung: Hier scannen.

PT Leia atentamente as instruções de montagem fornecidas antes de instalar o aparelho. Segurança e Manutenção: Scan aqui.

ES Lea atentamente las instrucciones de montaje proporcionadas antes de instalar el aparato. Seguridad y Mantenimiento: Escanea aqui.








 (mm)
100x100x46

 Ø82

 (mm)
12-25







TOOLS | OUTILS | WERKZEUG | FERRAMENTAS | HERRAMIENTAS



Umbrako 2mm
Phillips screwdriver





RECESSED CEILING ROSE
PATÈRE DE SUSPENSION ENCASTRÉE
DECKENDOSE ZUM EINBAU
CAIXA DE ALIMENTAÇÃO DE ENCASTRAR
BASE DE TECHO DE EMPOTRAR

912720... | 912730...

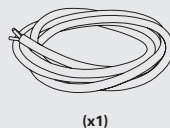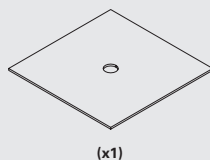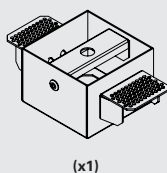


 (mm) **D (mm)**
Ø95x46 Ø82

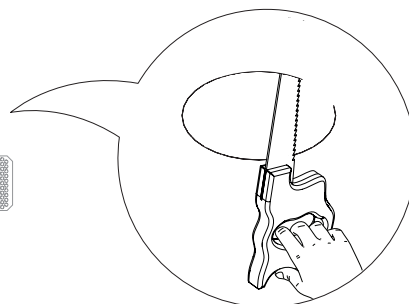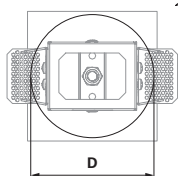


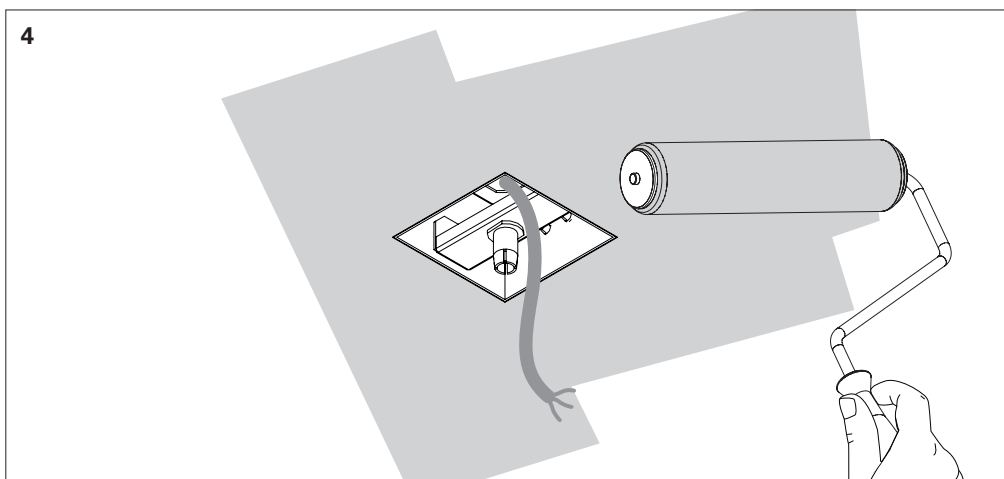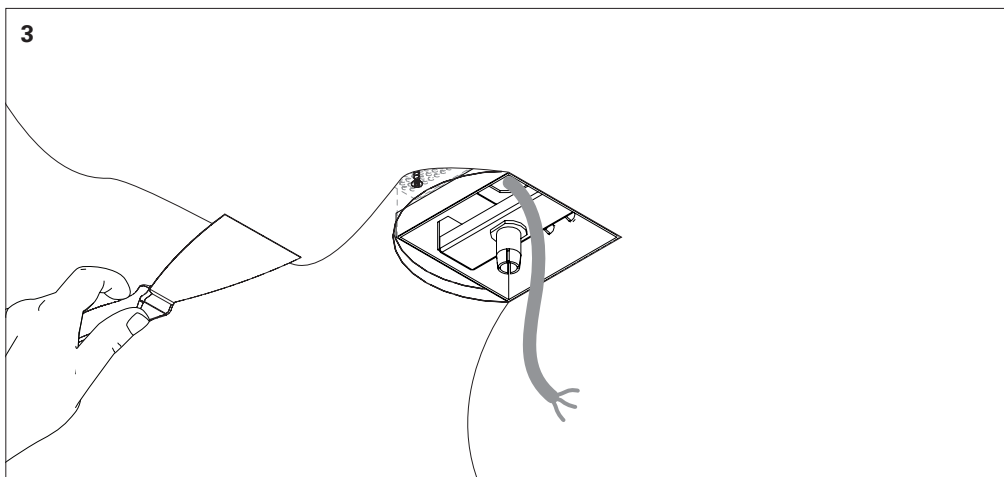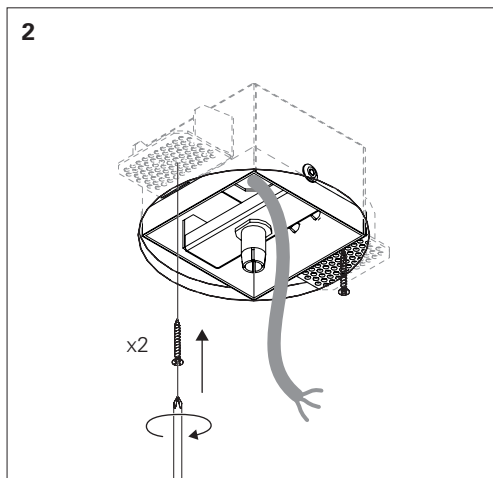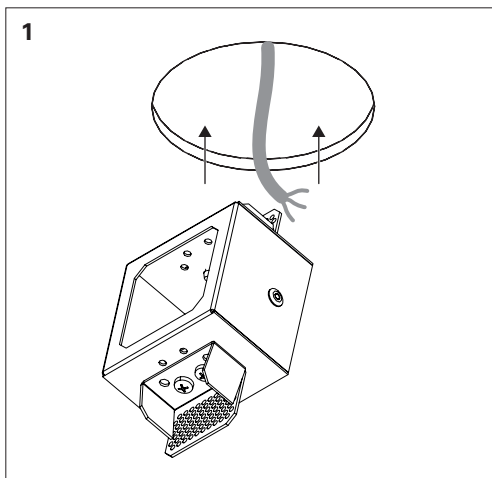


5

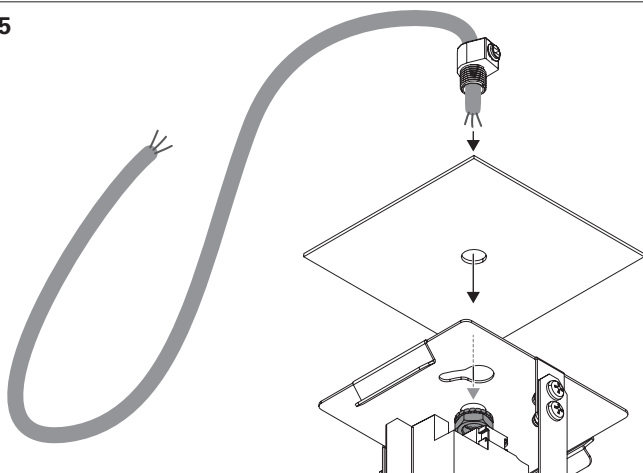


6




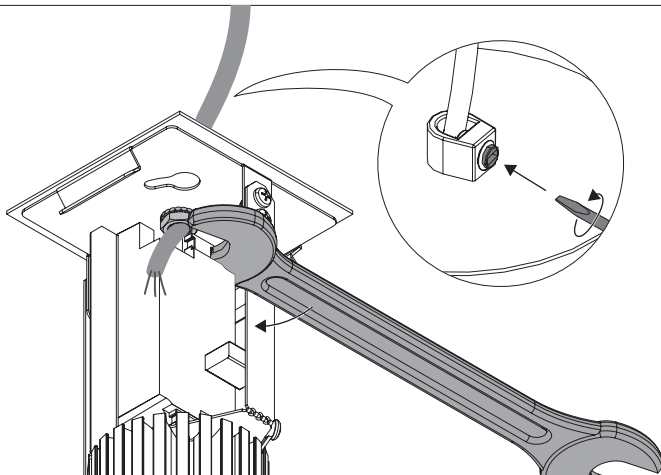


7 - HF

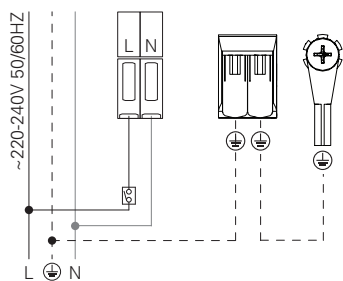


DALI

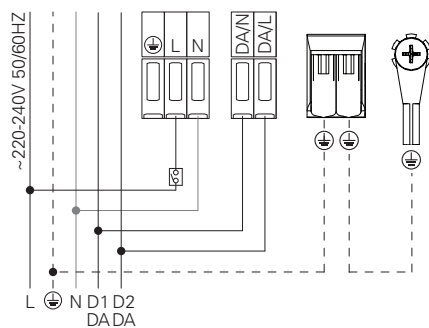


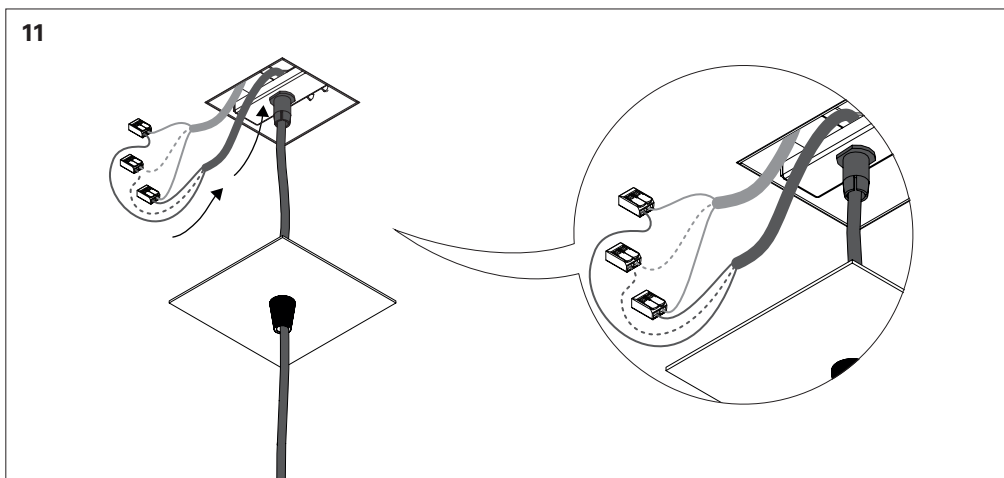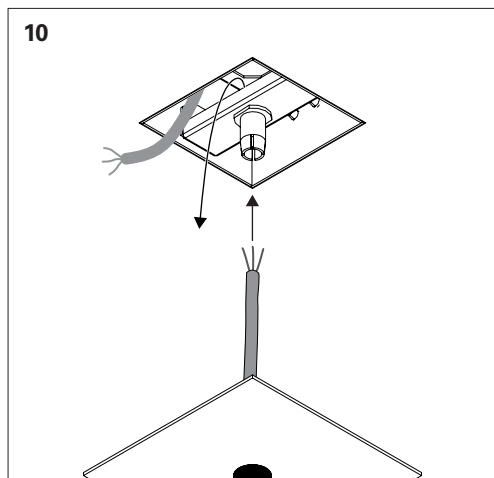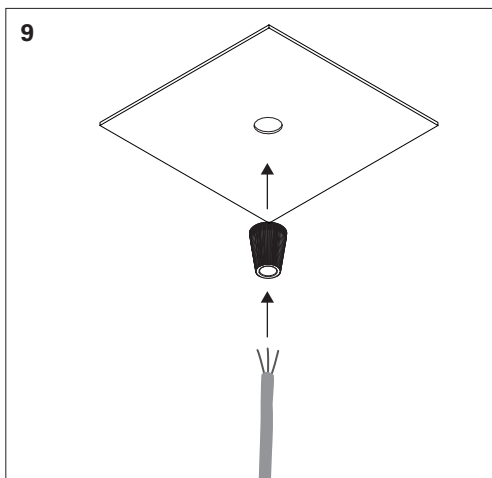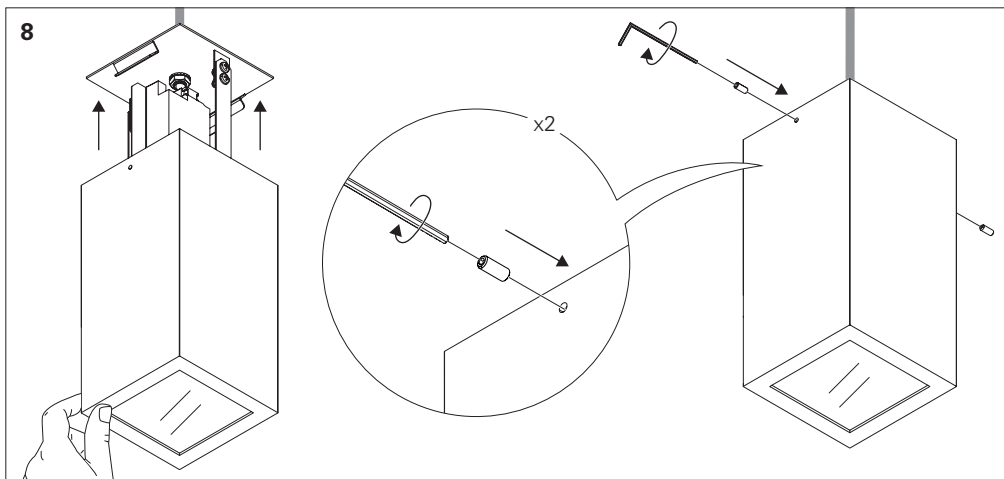

12 - HF

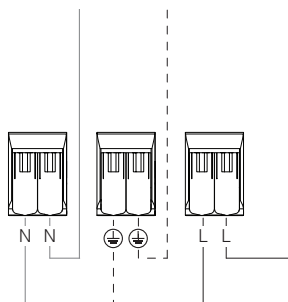

DALI

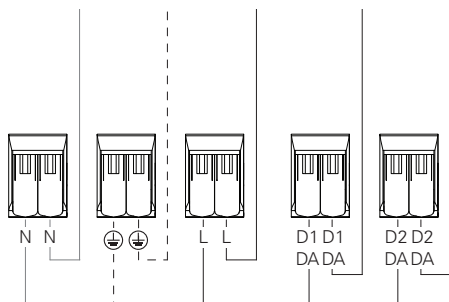

13

